


#### What is Boostbox?

Boostbox gives you 3G coverage in your home or office. You can make up to 4 calls at the same time.

You need a 3G mobile to use your Boostbox. Check that your mobile is able to use 3G first and that it's switched on under your mobile's settings. If you would like to register a mobile to your Boostbox, go to o2.co.uk/boostbox.

### **Getting Started**

- Plug one end of the white cable into your Boostbox and the other into any Ethernet socket on your broadband router.
- 2. Plug your Boostbox into the mains and press the on button. The 🖰 light will turn on.
- Your Boostbox will now automatically set up. This usually takes a few minutes but might take up to four hours. During setup, the @ light will flash.
- 4. Your Boostbox will be ready to use when the 🖰 @ lights are all on. The 🛅 light will be active when you use your Boostbox.

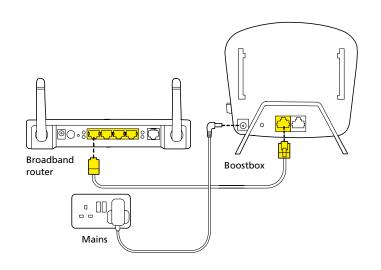

1

# What do the lights on my Boostbox mean?



#### Power

Off: Boostbox is off On: Boostbox is on Flashing: There's a problem (see FAQs)



#### Your connection

Flashing: Trying to connect On: Ready for use



#### Using your mobile

Off: No calls
On: Call in progress
Flashing: Maximum number of calls are being made



#### **Device status**

Off: No device connected with a cable (LAN port not in use On: You've connected a device with a cable (LAN port in use)

### **FAQs**

#### How do I know if my mobile is using my Boostbox?

The h will be active on your Boostbox.

#### Why won't my mobile connect to my Boostbox?

You need a 3G mobile to use your Boostbox. Check that your mobile is able to use 3G first and that it's switched on under your mobile's settings. If you replace your sim, you'll need to register your mobile again with your Boostbox.

#### What happens if I get a new mobile?

You'll need to make sure your new mobile and sim card are registered with your Boostbox. If you change your sim, you'll need to re-register your number with your Boostbox, go to o2.co.uk/boostbox.

# If I always leave my Boostbox on, how much electricity will it use?

It uses about the same amount of electricity as a broadband router.

#### What radio emissions does my Boostbox give out?

It gives out up to 20mW. That's less than a broadband router.

3

#### Why does the @ light keep flashing?

Your Boostbox is having trouble connecting to the internet. Make sure the cables are all plugged in and you can connect to the internet on your computer. Also try moving your Boostbox away from your router.

#### My Boostbox isn't working with my router.

If your router has been replaced or turned off and on, you'll need to turn your Boostbox off and on too.

# Can I still make calls when I'm sending emails or uploading files from my computer?

Yes, your Boostbox shouldn't be affected unless you're moving very big files over a slow connection. If you've got our Business Broadband, then your router will prioritise phone calls so they won't be affected.

# My Boostbox is working but now I can't connect my computer to wifi.

Move your Boostbox further away from your router.

#### How far does my Boostbox cover?

Your Boostbox has about the same coverage as your router.

#### Can I add another mobile number to my Boostbox?

Go to **o2.co.uk/boostbox**. You'll need to keep your Boostbox turned on so we can update it.

## Need some help?

If you get stuck, you'll need to go to **o2.co.uk/boostbox** or email us. You'll find our email address in your welcome email.

## **Safety Information**

Like any piece of electronic equipment you should use your Boostbox safely. Don't use it outside or for anything it wasn't meant for.

#### **Specific Absorption Rate (SAR)**

Your O2 Boostbox contains a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves set by international safety guidelines. These important guidelines were developed by the independent scientific organisation, ICNIRP, and include safety margins designed to ensure the protection of all persons, regardless of age and health.

Our tests are carried out in accordance with IEC standard EN50383/EN50385.

5